


# REAR COMBINATION LIGHT ASSEMBLY

## COMPONENTS

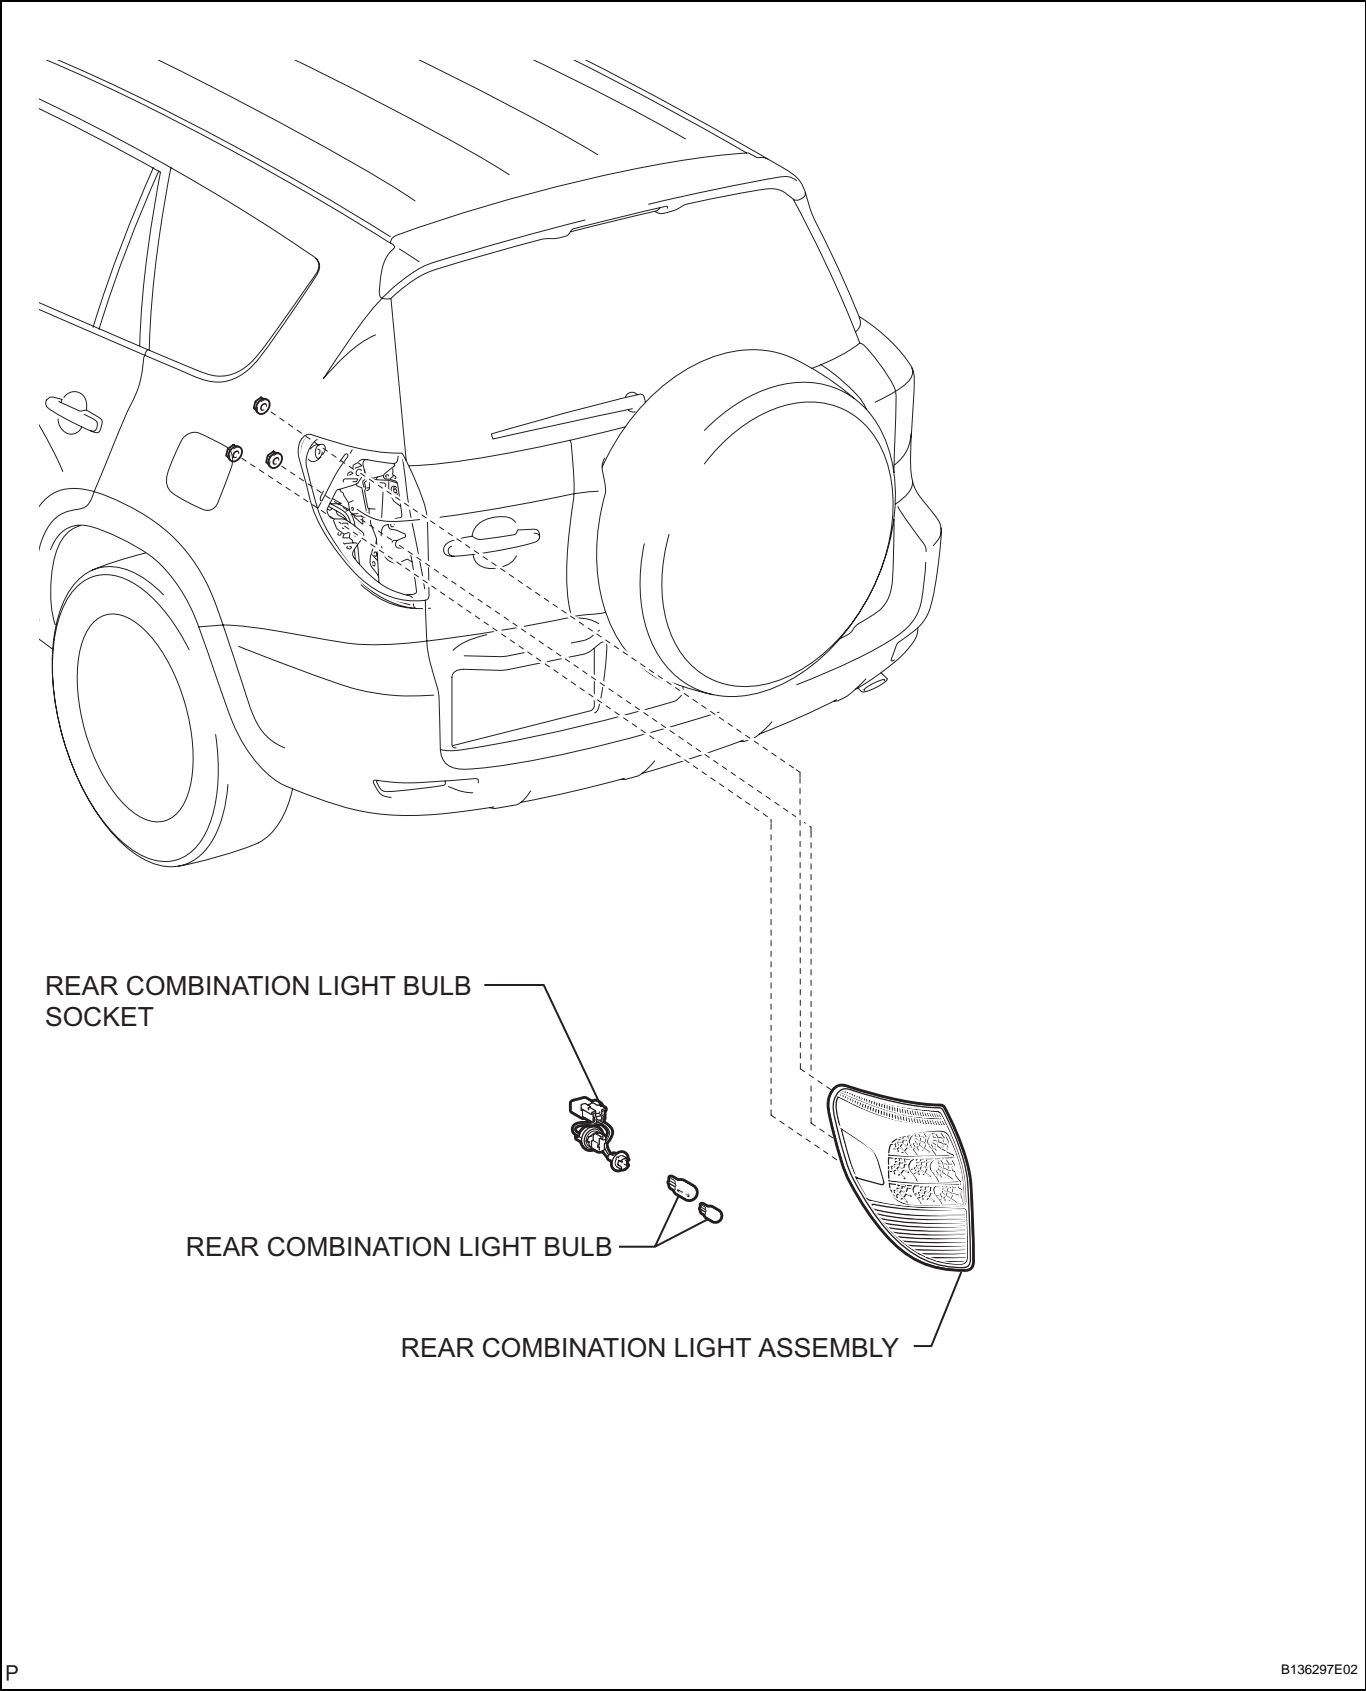

## REMOVAL

### HINT:

- Use the same procedures for the RH and LH sides.
- The procedures listed below are for the LH side.


### 1. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL

#### CAUTION:


Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to prevent airbag and seat belt pretensioner activation.

### 2. REMOVE REAR COMBINATION LIGHT ASSEMBLY

- (a) Remove the 3 nuts and disconnect the connector.

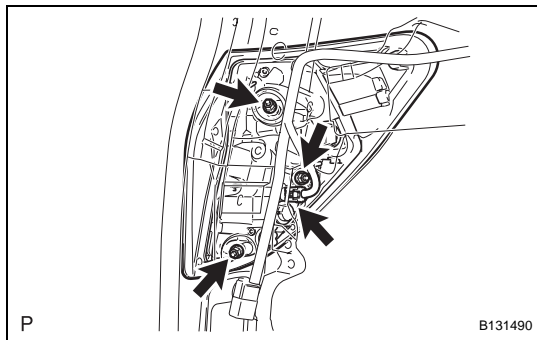

- (b) Detach the clip and remove the light.

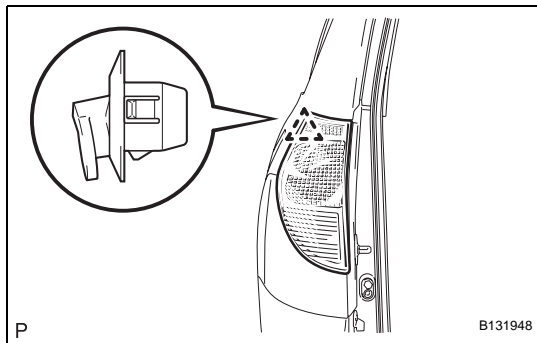


## DISASSEMBLY

### HINT:

- Use the same procedures for the RH and LH sides.
- The procedures listed below are for the LH side.

### 1. REMOVE REAR COMBINATION LIGHT BULB

- (a) Turn the 3 bulbs in the direction indicated by the arrows and pull to remove them.

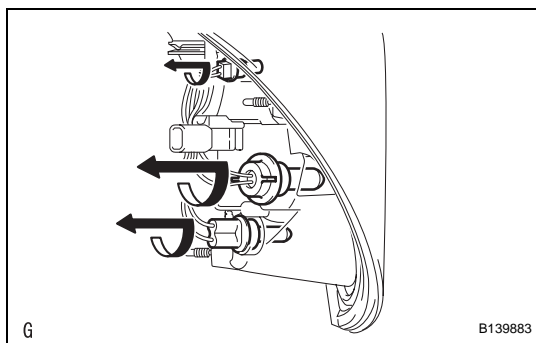


## REASSEMBLY

### HINT:

- Use the same procedures for the RH and LH sides.
- The procedures listed below are for the LH side.

### 1. INSTALL REAR COMBINATION LIGHT BULB

- (a) Turn the 3 bulbs in the direction indicated by the arrows to install them.

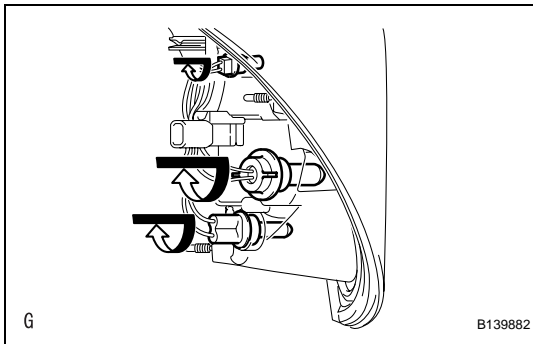


## INSTALLATION

### HINT:

- Use the same procedures for the RH and LH sides.
- The procedures listed below are for the LH side.

### 1. INSTALL REAR COMBINATION LIGHT ASSEMBLY

(a) Attach the clip to install the light.

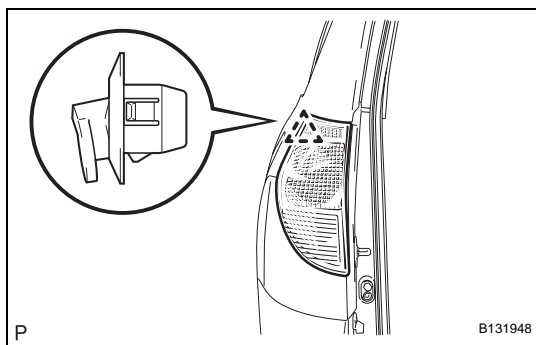

(b) Install the 3 nuts and connect the connector.

### 2. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL

